




# Dolby Accessibility Solution Theatre Staff Reference Guide

## Introduction

This guide provides the steps for connecting the Dolby Accessibility Solution Receiver to an auditorium for a patron.

## Dolby Accessibility Solution Receiver diagram

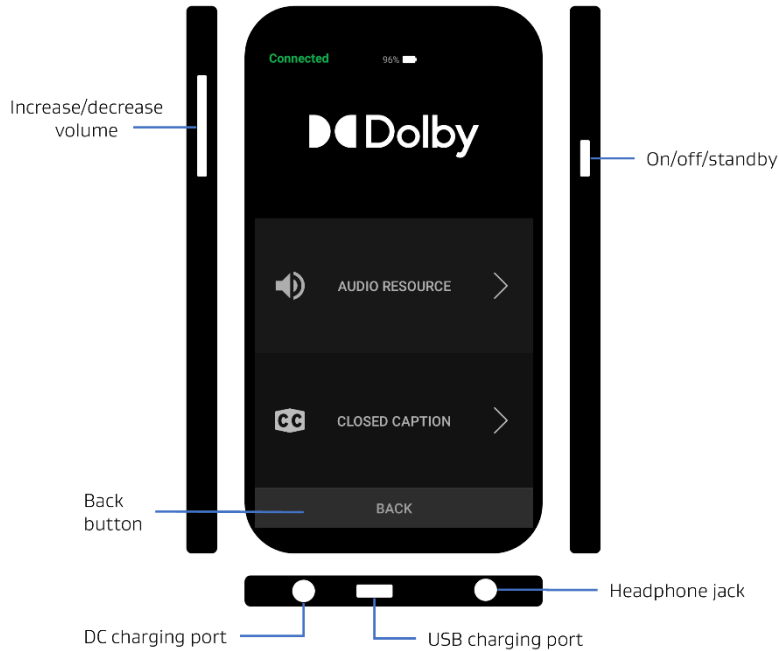


## Connecting the Dolby Accessibility Solution Receiver to an auditorium

### Step 1

From the right side of the Dolby Accessibility Solution Receiver, press the power button to turn on the device.

### Step 2

For blind or low vision patrons, you can enable the Talkback feature by tapping the accessibility icon in the upper right corner of the home screen. When Talkback is enabled, **Audio Description** is automatically enabled when connecting to the auditorium.





### Step 3

From the Dolby Accessibility Solution Receiver home screen, tap the – or + symbols to select the auditorium. You can also tap the **Auditorium** label and scroll to the desired auditorium.

### Step 4

Tap **CONNECT**.

**Important:** The connection is made only when the Dolby Accessibility Solution Receiver is within range of the Wi-Fi router. You may need to ask the patrons to tap **CONNECT** when they arrive in the auditorium.



### Step 5

To make a selection, choose from the available options:

- a) When **AUDIO RESOURCE** is selected, there are four choices. If you select **Audio Description**, the descriptive narration audio plays in both earpieces. If you select **Amplified Audio**, the amplified audio track plays in both earpieces. If you choose **Amplified Audio and Audio Description**, amplified audio plays in the right earpiece and descriptive narration audio plays in the left earpiece. If you choose **Amplified Audio and Closed Caption**, amplified audio plays in both earpieces while closed caption text is simultaneously shown on the receiver display.

**Important:** If a patron chooses the audio option, give the patron a stereo headphone set.

- b) For deaf or hard of hearing patrons that prefer caption text, tap **CLOSED CAPTION**. The closed captioning text starts when accessible content is playing.

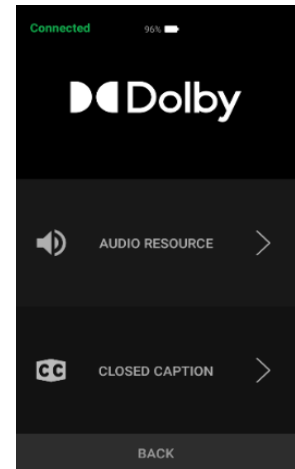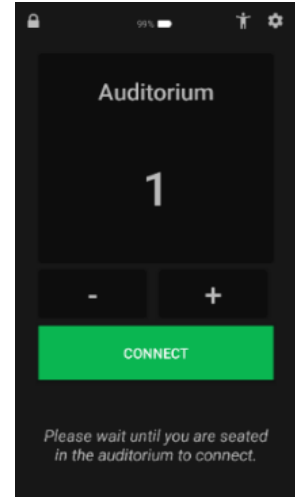

## Adjusting the Dolby Accessibility Solution Receiver adjustable arm

### Step 1

To adjust the size of the mount base, rotate the knob located above the cup-holder base.



### Step 2

To adjust the mount neck, bend and position the rubberized extension with two hands.



### Step 3

To adjust the receiver from portrait to landscape mode (or vice versa), loosen the adjusting nut, rotate the touch-screen display, and then retighten the adjusting nut.

